



LA GARD 700 Series

We make access in
life smart and
secure.

BEEP AND LIGHT REFERENCE

dormakaba 

700 Series Models 701-705

Event	Buzzer	LED	ScreenMessage(s) (Display Only)
System wakeup	Short high Beep	Short Green Flash	N/A
Key press	Short Beep	Short Green or Red Flash	High Beep + Green Flash Valid Key Low Beep + Red Flash Invalid Key
Valid command response	3 Short High Beeps	3 Short Green Flashes	Success
Invalid command response	3 Short Low Beeps	3 Short Red Flashes	Invalid Message
Wrong Try Penalty	2 Short Low Beeps- Every 10 Seconds End of Penalty Period 2 High Beeps	2 Short Red Flashes- Every 10 Seconds End of Penalty Period 2 Green Flashes	Wrong Try Penalty
Time Delay Window	1 Low Beep- Every 10 Seconds	1 Red Flash- Every 10 Seconds	Time Delay
Confirm Window	1 High Beep- Every 10 Seconds	1 Green Flash- Every 10 Seconds	Confirmation Window
Low Battery	2 Low Beeps	2 Red Flashes	Low Battery
Critical Low Battery	3 Long Low Beeps	3 Long Red Flashes	Critical Low Battery
Master Reset	3 Short high Beeps	3 Short Green Flashes	Reset Success
Power On No lock connected	5 Medium to Low Beeps	5 Medium Red Flashes	Connect Lock
Power On Bad configuration	5 Medium to Low Beeps	5 Medium Red Flashes	Bad Config
Power On/Wake Up No lock installed	1 Medium Low Beep	Solid Red LED	Install Primary Lock
Power On Keypad not compatible	1 Long Low Beep	Continuous alternate Flashing Red and Green	Wrong Keypad Model Cannot Install

Master reset	3 Short high Beeps	3 Short Green Flashes	Reset Success
---------------------	--------------------	-----------------------	---------------

700 BASIC		
Event	Buzzer	LED
Valid command response	2 Short Beeps	2 Short Red Flashes
Invalid command response	3 Short Beeps	3 Short Red Flashes
Press #	No Response	No Response
Power On - No lock connected	5 Short Beeps	5 Short Red Flashes
Power On - lock connected	1 Short Beeps	1 Short Green Flash
Wrong Try Penalty	None	1 Short Red Flashes every 10 seconds
Low Battery	5 Short Beeps	5 Red Flashes
Critical Low Battery	10 Short Beeps	10 Red Flashes
Super Master Reset	None	LED will turn off to signify success